



## REMOTE CONTROL

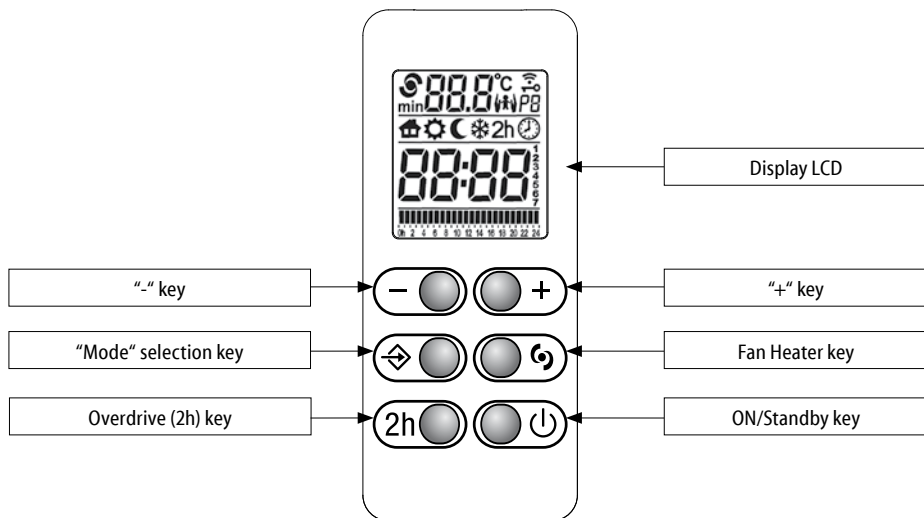

## DISPLAY

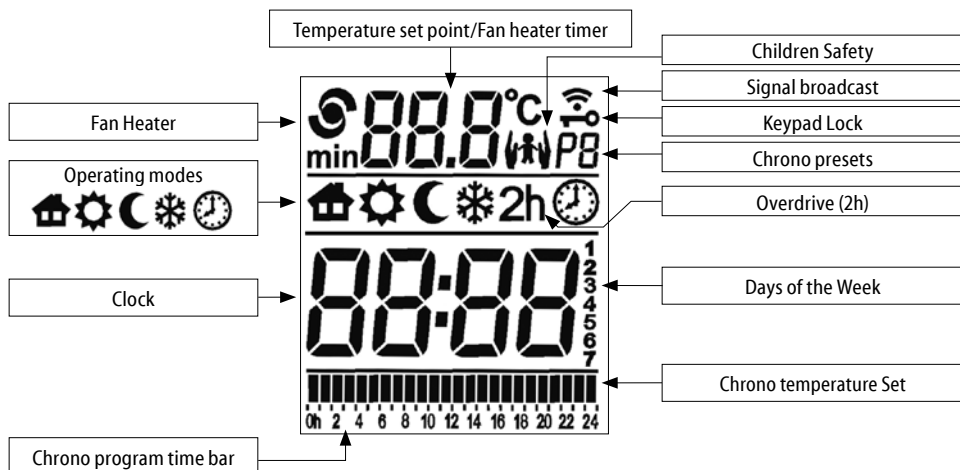

Signal transmission from the remote control (if supplied) to the appliance.

## TURNING ON FOR THE FIRST TIME

After inserting the batteries, set the day of the week and time.

1  
2  
3  
4  
5  
6  
7

Adjust the day of the week by using the “+” and “-” keys (1=MON, 2=TUE,...7=SUN), then confirm by pressing the “Mode” selection key.

20:30

The hour starts flashing. In the same way, adjust the hour by using the “+” and “-” keys and confirm with “Mode” selection key.

 
20:30

Repeat the same procedure for the minutes.

## ON/STANDBY MODE

20:30

In “Standby” mode the current time and the day of the week appear on the display. All the operating modes are suspended (“Pilot Wire” included), but the appliance is powered and waiting for command reception.



To turn the appliance on or off, press the “Standby” key.

 
The towel warmer turns on in the previously selected operating mode and emits a beep. When first using the remote after replacing the batteries, the “Comfort” mode is selected. The entry into “Standby” mode is signalled by means of a double beep, the exit from “Standby” mode by means of a long beep.

**IMPORTANT:** After having pressed the “Standby” button on the control panel, the appliance ignores all orders transmitted by the remote control other than “Standby” and emits a beep to indicate the error.








Compared to the control panel, the remote control offers the possibility to only activate certain operating modes and functions.

## OPERATING MODES



The appliance provides 5 operating modes which allow the user to heat the environment in the most suitable way with respect to his needs.

 
Press the “Mode” selection key to select the desired operating mode. An icon on the LCD will show the selected operating mode.


	Pilot Wire		Comfort
	Night/Eco		Anti-Freeze
	Chrono		


## CHRONO

In “Chrono” mode, you can select one of the three preset chrono-thermostat programs or the custom program. The latter lets you set various temperatures (“Comfort” and “Night/Eco”) over a 24 hour period for each day of the week.

## CHOICE OF PROGRAM



 Press the “Mode” key until the icon  is displayed. Then press the “Mode” and “-” keys together and hold them both down for at least 3 seconds.



The program code (P1, P2, P3 and P4) flashes. Press the “+” and “-” keys to set the program. Press the “Mode” key to confirm.



PROGRAM P1	HOURS	MODE
FROM MONDAY TO FRIDAY	0 - 6	Night/Eco
	6 - 9	Comfort
	9 - 16	Night/Eco
	16 - 23	Comfort
SATURDAY AND SUNDAY	23 - 0	Night/Eco
	0 - 7	Night/Eco
	7 - 23	Comfort
	23 - 0	Night/Eco


PROGRAM P2	HOURS	MODE
FROM MONDAY TO SUNDAY	0 - 7	Night/Eco
	7 - 23	Comfort
	23 - 0	Night/Eco


PROGRAM P3	HOURS	MODE
FROM MONDAY TO FRIDAY	0 - 6	Night/Eco
	6 - 9	Comfort
	9 - 13	Night/Eco
	13 - 23	Comfort
SATURDAY AND SUNDAY	23 - 0	Night/Eco
	0 - 7	Night/Eco
	7 - 23	Comfort
	23 - 0	Night/Eco


## PROGRAM P4 - CUSTOM

 With the "P4" program, you can set different temperatures ("Comfort" and "Night/Eco") over a 24 hour period for each day of the week.

## SETTING THE CURRENT DAY AND TIME



 
Before setting the custom programme, make sure the time and day of the week are set correctly. If this is not the case, press the "Mode" key until the icon  is displayed.




Then press the "Mode" key again and hold it down until the number indicating the day flashes.

1  
2  
3  
4  
5  
6  
7

 Adjust the day of the week by using the "+" and "-" keys (1=MON, 2=TUE, ...7=SUN), then confirm by pressing the "Mode" selection key.




 
The hour starts flashing. In the same way, adjust the hour by using the "+" and "-" keys and confirm with "Mode" selection key.



Repeat the same procedure for the minutes.

## SETTING THE PROGRAM

 Now an hourly sequence can be set for each day. Start with the first day. Choose by means of the "+" and "-" keys, for each hour, between the "Comfort" temperature (full bar) and the "Night/Eco" temperature (empty bar).

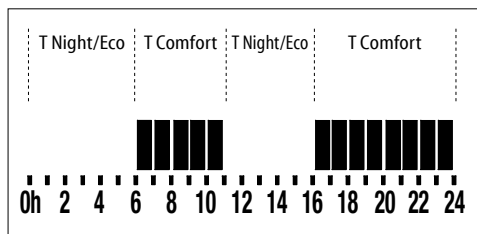

Press the "Mode" key to confirm and repeat the same procedure for each day of the week. The weekly program is now set, the appliance emits an acoustic signal for confirmation.

## FUNCTIONS

The appliance has a number of special functions to customise and optimise use.

## ASC

The "ASC" function cannot be activated or deactivated on the remote control (see Ch. 4.3.1).

 
## OPEN WINDOW


The "Open Window" function cannot be activated or deactivated on the remote control (see Ch. 4.3.2).

## HOLIDAY

The "Holiday" function cannot be activated or deactivated on the remote control (see Ch. 4.3.5).

## CHILDREN SAFETY



To activate the function, press the "+" and "-" keys together and hold them both down until the icon  appears on the display.

To deactivate the function, repeat the same operation.

"Children Safety" can be activated in all operating modes, including "Overdrive (2h)". The function cannot be activated when the appliance is in "Standby".

## OVERDRIVE (2h)

The "Overdrive (2h)" can be used to heat the room quickly.



Press the "2h" key to start the "Overdrive (2h)". The function cannot be activated when the appliance is in "Standby".

The temperature set point disappears from the display of the remote control.

 
The appliance heats at the maximum power for 2 hours, independently from the temperature setting.

To deactivate the "Overdrive (2h)" function at any time, press the "2h" key again, the "Mode" key or the "Standby" key.

The "Overdrive (2h)" is set to stop automatically after 2 hours anyways.

## DISABLE DISPLAY BACKLIGHTING

The display backlighting can be disabled if not required.





To disable the backlighting, press the "LED OFF" and "+" buttons together and hold them down until "LED OFF" is shown on the remote control display.

To enable backlighting again, repeat the same operation. "LED On" will be shown on the remote control display.

## KEYPAD LOCK

  It is possible to lock the remote control keypad to avoid accidental modifications.



To activate the function, press the "Mode" and "+" keys together and hold them both down until the icon  appears on the display.

To unlock the keypad, press the same two keys together as before.

The "Keypad Lock" icon will no longer appear on the LCD.



### IMPORTANT:

The "Keypad Lock" function does not inhibit the "Standby" key. This is therefore always active, even when the "Keypad Lock" function is enabled.

## FAN HEATER

The "Fan" function is only available for appliances fitted with fan heater.

It is not available on this product. If the "Fan Heater" is pressed, the appliance confirms the command reception but it does not modify its current state.



### WARNING:

If the batteries are flat, the "batt" warning appears on the display of the remote control.

**IMPORTANT:** In case of power down due to a black-out, all the current settings are kept in memory for about 4 hours. At recovery from power down after 4 hours, the appliance goes to the previously selected operating mode, losing the hour and day of the week.

If the power down happens when the appliance is in "Chrono" mode, when the date and time data have been lost, the appliance will restart in "Energy Saving" mode.

The user settings will be restored as soon as the first command (if provided) is sent from the RCU.

**IMPORTANT:** If the appliance remains without power while the "2h Override" function is enabled, the time remaining until the end of the two hour period is retained for about four hours. After this time, when power is restored the date and time settings are lost. The appliance exits the function and operates in the mode selected previously.

**IMPORTANT:** In case of power down while the "Holiday" function is enabled, when restored, the function remains active and the countdown of days to the end of the holiday resumes from the moment of its stop.

**IMPORTANT:** In case of power down while the "ASC" function is enabled, when restored, the function remains active but a few days will be required for it to become fully operational.

## 5. CLEANING



Before cleaning, make sure the appliance is turned off, cold and disconnected from the household mains.



To clean, just wipe with a soft damp cloth and neutral detergent. Never use abrasive or corrosive cleaning products or solvents.



To maintain efficiency, remove the dust from the surface and inside of the appliance at least twice a year using a vacuum cleaner.

## 6. MAINTENANCE



Should any technical problems arise, contact a qualified professional (recognised or authorised by the dealer or manufacturer) or your local dealer.



All operations on the appliance must be carried out by a qualified professional who before performing maintenance must make sure the appliance is turned off, cold and disconnected from the household mains.



The appliance contains a precise quantity of special fluid. All repairs requiring the appliance to be opened must be performed by a qualified professional.

In the event of fluid leaks, contact your local dealer or a qualified professional.

## 7. TROUBLESHOOTING

<p>The appliance does not heat up.</p>	<ul style="list-style-type: none"> <li>• Check if the appliance is correctly connected to the mains power grid and powered.</li> <li>• Check the position of the mains switch of the installation.</li> <li>• Increase the temperature set point on the appliance regulator.</li> <li>• Make sure there are no garments covering the control device or temperature sensor.</li> <li>• Disconnect the appliance from the household mains for a few minutes to reset the electronic system.</li> <li>• If it still does not heat up, contact your local dealer or a qualified professional.</li> </ul>
<p>The appliance heats continuously.</p>	<ul style="list-style-type: none"> <li>• Reduce the temperature set point on the appliance regulator.</li> <li>• Make sure the "Overdrive (2h)" function has not been activated accidentally.</li> <li>• Make sure there are no garments covering the control device or temperature sensor.</li> <li>• If it continues to heat, contact your local dealer or a qualified professional.</li> </ul>
<p>The room stays cold.</p>	<ul style="list-style-type: none"> <li>• Make sure the power of the appliance is adequate for the room to be heated.</li> <li>• If the appliance is being used for the first time, the room takes at least a couple of hours to heat to the required temperature (setting the radiator to maximum does not raise the temperature more quickly).</li> </ul>
<p>Leaks of the liquid in the appliance.</p>	<ul style="list-style-type: none"> <li>• Turn the appliance off and contact your local dealer.</li> <li>• Dry the fluid using rags or absorbent material. Keep children and pets away from the liquid.</li> </ul>
<p>The appliance does not respond correctly to orders received from the Pilot Wire control unit.</p>	<ul style="list-style-type: none"> <li>• Disconnect the appliance from the mains power supply (switch off the mains switch by moving it in the "O" position). Make sure the connection is correct (Fig.8) and the control unit is functioning correctly.</li> <li>• Contact a qualified professional.</li> </ul>
<p>The appliance keeps on heating despite the window is open and the "Open Window" function is active.</p>	<ul style="list-style-type: none"> <li>• It may be necessary to wait a few minutes before the function starts operating.</li> <li>• The difference between the outside and inside temperature may not be sufficient to activate the function.</li> <li>• Check that the positioning of the appliance comply with the requirements referred to in ch. 4.3.2 of this booklet.</li> <li>• Check that the area around the appliance Command is free of any obstacles.</li> <li>• If the problem persists, contact your dealer or qualified personnel.</li> </ul>
<p>The appliance does not resume heating after the window is closed and the "Open Window" function is active.</p>	<ul style="list-style-type: none"> <li>• It may be necessary to wait a few minutes before before the sensor detects the window closing.</li> <li>• Check that the area around the appliance Command is free of any obstacles.</li> <li>• Deactivate and activate the function again.</li> <li>• Should the response time of the function be too long, you can always start the appliance manually.</li> <li>• If the problem persists, contact your dealer or qualified personnel.</li> </ul>
<p>The display shows "ALL".</p>	<ul style="list-style-type: none"> <li>• The temperature sensor is malfunctioning. Turn off the appliance and contact your dealer.</li> </ul>

## 8. GUARANTEE



You are recommended to keep all parts of the packaging in case the appliance needs to be returned to the dealer. The appliance must arrive complete and undamaged in order to maintain the validity of the guarantee.

The Manufacturer guarantees customers all the rights specified in European Directive 1999/44/EC and the consumer rights recognised by national legislation.

The guarantee specifically covers all non-conformities and production defects present at the moment of sale or becoming evident within two years from the date of purchase and gives the customer the right to free repair of the defective product or replacement should repair be impossible.

The above rights are invalidated in the following cases:

- defects caused by uses other than those specified in the instructions, which are an integral part of the sales contract;
- defects caused by accidental breakage, negligence or tampering.

Operations involved in installation, connection to the household mains and maintenance described in these instructions are not covered by the guarantee.

The Manufacturer declines all liability for damage or injury caused directly or indirectly to people, objects or pets as a result of the failure to apply these instructions, with particular reference to warnings regarding installation, start-up and use of the product.

To claim the above rights, the Customer must contact his/her dealer and present a valid proof of purchase issued by the seller, complete with date of purchase.

## 9. DISPOSAL



Make sure the power cable is disconnected from the power line before performing any operation. To remove the appliance, follow the procedure for fixing to the wall in reverse (Page. 257).

Disposal of this appliance and the fluid contained inside the towel warmer must be carried out in accordance with the legislation in force for the disposal and management of waste.



**Important information for correct disposal of the product in accordance with EC Directive 2012/19/EC.**

At the end of its working life, the product must not be disposed of as urban waste.

It must be taken to a special local authority differentiated waste collection centre or to a dealer providing this service.



This appliance complies with European Directives:

2014/30/EU on electromagnetic compatibility

2014/35/EU on low voltage

2011/65/EU on restriction of the use of certain hazardous substances

2009/125/EC on ecodesign requirements



## ELECTRICAL CONNECTIONS WITH PLUG READ CAREFULLY

Before plugging into the mains socket, make sure that the voltage of your mains power supply matches the V value reported on the rating plate of the appliance and that the socket and power line are appropriate for the required load (also reported on the rating plate).

Make sure that the power line is fitted with a disconnecting switch allowing the appliance to be disconnected completely from the household mains, in accordance with the regulation in force.

The power line must be fitted at least with a 30 mA RCD (high sensitivity residual current protection device).

All the references about the "Pilot Wire" (Fil Pilote) mode and related wiring present in the instruction manual must be ignored, since operating mode is not available on this product.